



PERRY LUXE

HOW TO MAKE A CURVED WALL TEMPLATE

Supplies needed: kraft paper, marker, scissors, masking tape and packing tape.

Acceptable materials for making templates: kraft paper, butcher paper, wood or construction paper.

DO NOT MAKE TEMPLATES FROM: newspaper, plastic, wax paper, fabric, tissue paper, roofing paper or wrapping paper. If the material used to make a template stretches, tears easily, will not lay flat or will mark the fabric. **IT WILL NOT BE USABLE.**



Step 1: Unroll the paper and place it on the ceiling or floor of the template location. Make sure that the paper overlaps onto the wall.



Step 2: Splice the paper if necessary.



Note: Often the shape of the area to be templated exceeds the depth and length of the paper. If so, splice on a piece of kraft paper. Be sure to tape the splice on both sides of the paper so it doesn't pull apart.

Step 3: Crease the paper against wall.




Step 4: Mark the arc of the curve where the wall meets the ceiling or floor with a marker.



Step 5: Label your template.

- We need your company name , the job name/PO/Sidemark, as well as the job name for SM/reference in the ship to address.
- Mark placement of motor (left or right depending on electrical junction box), ceiling or floor, wall location, left side/right side and where the product starts and stops.
- Reference templates to a location on the project, because there can be multiple windows: north wall-MBR, south wall-LR, kitchen bay, office-west, etc.
- Mark everything top or bottom as well as left or right so we understand exactly how the template was taken.

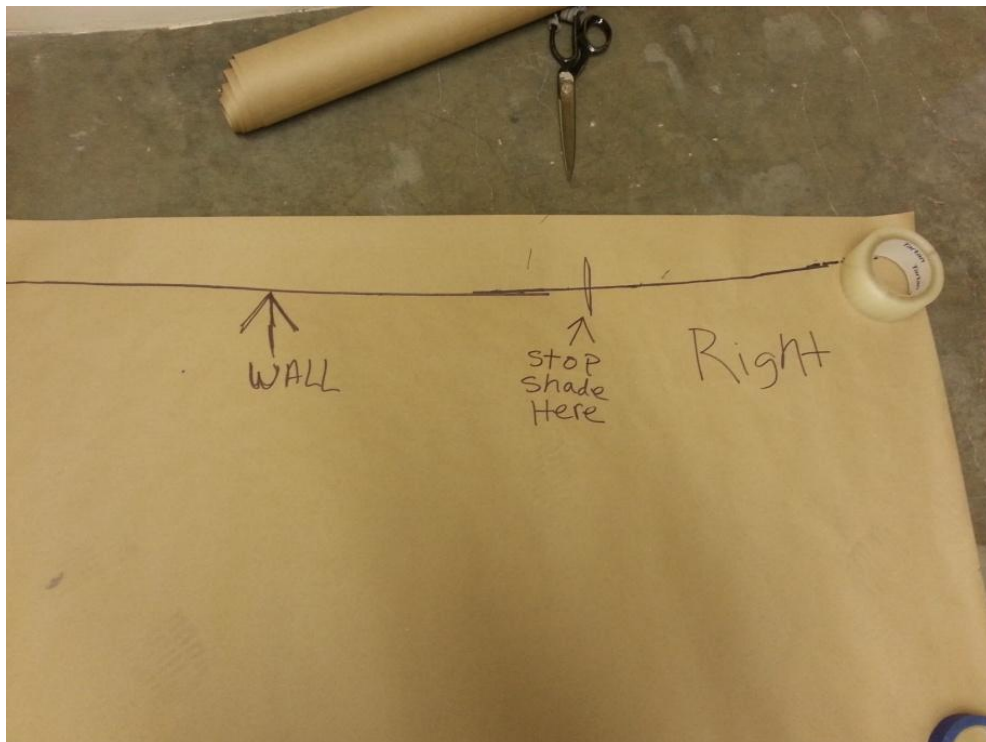

Step 6: You're done! Fold the sticky sides of tape in on itself and roll up the template. **DO NOT FOLD TEMPLATE.** Insert in a mailing tube and mail it to us.



Note: When mailing, make sure to get a tracking number and include your return address on the package. Please include your contact information and the side mark inside the package.

Please call us at 520-884-5152 or email info@perryluxe.com if you have any questions!

Mail Template To:

Perry Luxe
610 South Park Avenue
Tucson, AZ 85719, USA