



PERRY LUXE

PROJECT: Perry Luxe

DRAWING TITLE: Electrical Location


FINISH SELECTION: N/A

DATE: 2/12/21

DATE OF APPROVAL:

APPROVED BY:

Outside Mount: Locate electrical 6" below top of shade and 6" from edge of shade install location.

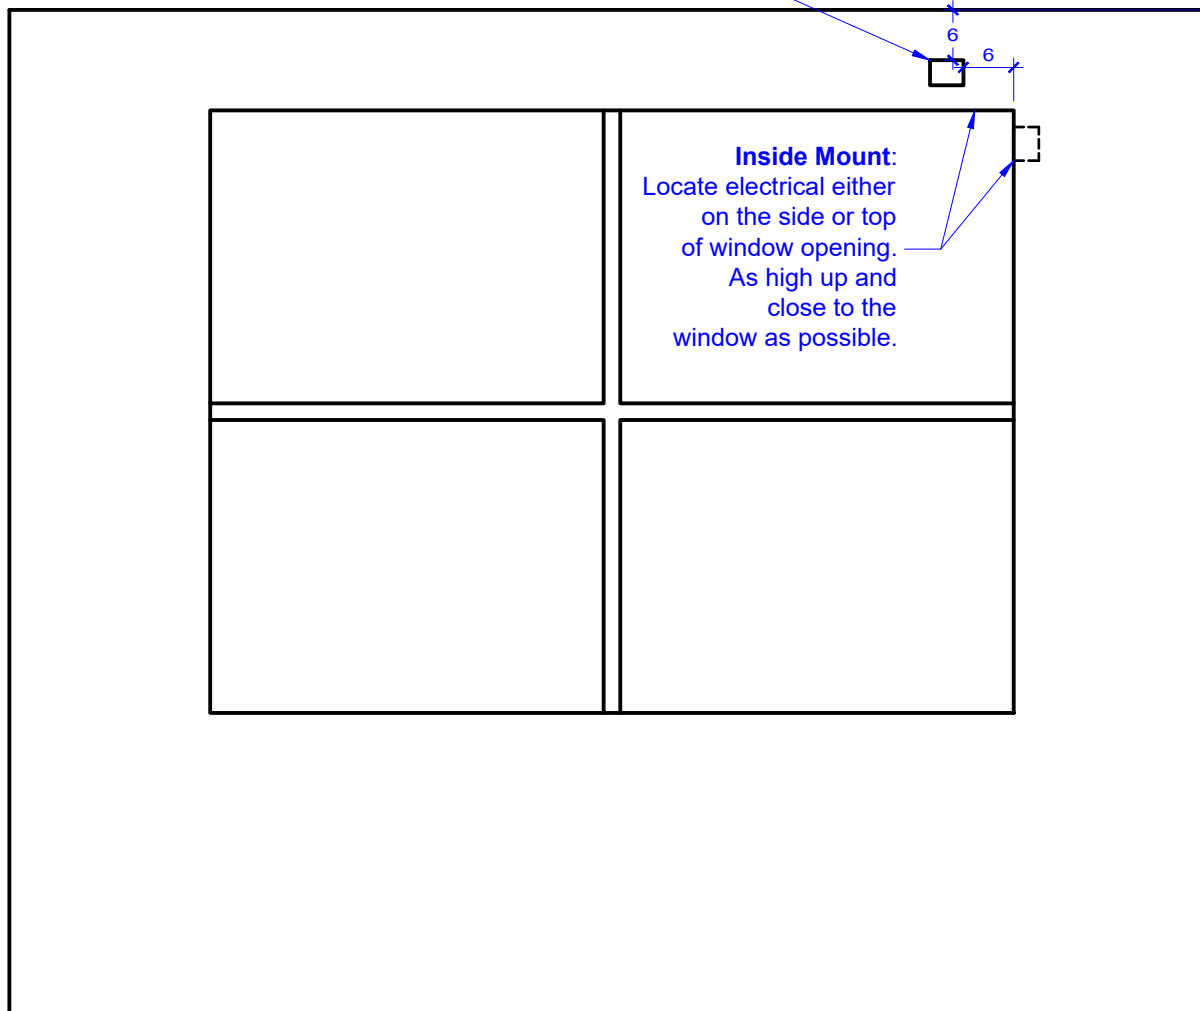

Inside Mount:
Locate electrical either
on the side or top
of window opening.
As high up and
close to the
window as possible.

Motors surge at 3 amps at
start up and operate at 1
1/2- 2 amps.